

**Occupational Health and Safety****PLANT RISK ASSESSMENT**

Plant Description:	<b>CAT 966H / CAT 966 M / CAT 966GC</b>	Assessment No:	<b>PRA-07</b>
Prepared by: Date:	<b>Greg Fieldwick 24/10/2021</b>	Approved by: Date:	<b>Steven Fieldwick 24/10/2021</b>

**Reference Documents:**

**Fieldwicks SW106 Loader Operations**  
**Fieldwicks Employee Induction Handbook**  
**Manufacturers Maintenance Manual**  
**Manufacturers Operating Manual**

Note : Refer to the Risk Matrix set out in OH&SP No. 004 for calculation of risk level

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Entanglement:</b> Hair, clothing, gloves, or other materials becoming entangled with moving parts of the plant</p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Machine guarding in place and checked on a daily basis as part of start up procedures</li> <li>• No person permitted to be in close proximity to the operating area of the machine unless authorised and has made contact with the operator</li> <li>• All obstacles that may be in the path of a machine are removed before work commences</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Machine fitted with movement alarm</li> <li>• Driver only permitted in cab during operation</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Crushing:</b> <i>Uncontrolled or unexpected movement of the plant</i></p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Warning decals on machine highlighting pinch points / close clearance</li> <li>• Machine controls have their functions labelled</li> <li>• No person permitted to be in close proximity to the operating area of the machine unless authorised and has made contact with the operator</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Machine fitted with movement alarm</li> <li>• Machine fitted with warning lights</li> <li>• Machine fitted with rear view mirrors</li> </ul>	2

Fieldwicks Crushing and Screening	Plant Risk Assessment- CAT 966	Issue 24 Oct 2021	Page 3 of 14
-----------------------------------	--------------------------------	-------------------	--------------

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Cutting, Stabbing, Puncturing:</b> Contact with moving parts of machine, sharp objects</p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Machine controls have their functions labelled</li> <li>• All obstacles that may be in the path of a machine are removed before work commences</li> <li>• Machine bucket, attachments etc are always lowered to the ground before any attempt to repair or inspect them</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Regular job briefing take place between all relevant stakeholders when machine is operating</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Shearing:</b> <i>Body parts sheared between two parts of the machine or other structures</i></p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Warning decals on machine highlighting pinch points / close clearance</li> <li>• Machine controls have their functions labelled</li> <li>• No person permitted to be in close proximity to the operating area of the machine unless authorised and has made contact with the operator</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Machine fitted with movement alarm</li> <li>• Machine fitted with warning lights</li> <li>• Lockable cab to prevent unauthorised access</li> <li>• Driver only permitted in cab during operation</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Striking:</b></p> <p><i>During operation of plant, moving parts of plant, movement of plant</i></p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Warning decals on machine highlighting pinch points / close clearance</li> <li>• Machine controls have their functions labelled</li> <li>• Machines fitted with pattern changes have warning signage to advise operator to check before moving</li> <li>• No person permitted to be in close proximity to the operating area of the machine unless authorised and has made contact with the operator</li> <li>• All obstacles that may be in the path of a machine are removed before work commences</li> <li>• Regular job briefing take place between all relevant stakeholders when machine is operating</li> <li>• Machine fitted with movement alarm</li> <li>• Machine fitted with warning lights</li> <li>• Machine fitted with Spot lights for working in low of no natural light</li> <li>• Machine fitted with rear view mirrors</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>High Pressure Fluid:</b></p> <p>Contact with high pressure fluids during operation or maintenance</p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Machine controls have their functions labelled</li> <li>• Machine buckets, attachments etc are always lowered to the ground before any attempt to repair or inspect them</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• All fluid lines are relieved on any pressure before they are disconnected and/or repaired</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Regular job briefing take place between all relevant stakeholders when machine is operating</li> <li>• Lockable cab to prevent unauthorised access</li> <li>• Driver only permitted in cab during operation</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Electrical:</b></p> <p>Contact with live electrical conductors during operation, overload of electrical circuits, electrical leads and cables</p>	23	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• All obstacles that may be in the path of a machine are removed before work commences</li> <li>• Machine booms, attachments etc are always lowered to the ground before any attempt to repair or inspect them</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Machine is fitted with circuit breakers and fuses</li> <li>• Warning signage inside machine to warn of contact with overhead powerlines</li> <li>• Machine fitted with movement alarm</li> <li>• Machine fitted with UHF Radio</li> <li>• Machine fitted with Spot lights for working in low of no natural light</li> <li>• Machine fitted with rear view mirrors</li> </ul>	11

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Explosion:</b> Explosion of onboard fuel supply or other substances</p>	16	<ul style="list-style-type: none"> <li>Operator Manual Located in Cab of Machine at all times</li> <li>All obstacles that may be in the path of a machine are removed before work commences</li> <li>Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>All fluid lines are relieved on any pressure before they are disconnected and/or repaired</li> <li>Isolation Procedures are undertaken before any maintenance activity</li> <li>Machine is fitted with circuit breakers and fuses</li> <li>Regular job briefing take place between all relevant stakeholders when machine is operating</li> </ul>	11

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Slipping, Tripping, Falling:</b></p> <p>Uneven or slippery surfaces, poor housekeeping, other obstacles, poor access and egress, lack of handrails</p>	17	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Machine bucket, attachments etc are always lowered to the ground before any attempt to repair or inspect them</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> <li>• Handrails in place to allow for safe access and egress</li> <li>• All personnel accessing and egressing machine must always maintain a 3 point contact</li> <li>• Slip resistant ladder rails and foot wells are fitted</li> <li>• Machine fitted with Spot lights for working in low of no natural light</li> </ul>	5

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Ergonomic:</b></p> <p>Seating, repetitive body movements, inadequate lighting, poor vision from normal operating position</p>	13	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• Handrails in place to allow for safe access and egress</li> <li>• All personnel accessing and egressing machine must always maintain a 3 point contact</li> <li>• Slip resistant ladder rails and foot wells are fitted</li> <li>• Machine is fitted with a seat belt and warning signage</li> <li>• Machine fitted with movement alarm</li> <li>• Machine fitted with warning lights</li> <li>• Machine fitted with UHF Radio</li> <li>• Machine fitted with Spot lights for working in low of no natural light</li> <li>• Ergonomically designed , fully adjustable operator seat in stalled</li> <li>• Machine fitted with rear view mirrors</li> <li>• Lockable cab to prevent unauthorised access</li> <li>• Windscreen wipers fitted</li> <li>• Driver only permitted in cab during operation</li> </ul>	5

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>Suffocation:</b> <i>Exhaust Gases, atmospheric contamination, other fume sources</i></p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• All fluid lines are relieved on any pressure before they are disconnected and/or repaired</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> </ul>	2

Hazards/Risk Factors	Uncontrolled Risk Score	Control Measures	Controlled Risk Score
<p><b>High Temperature:</b> Engine or exhausts, fluids or other exposure to high temperatures</p>	16	<ul style="list-style-type: none"> <li>• Licensed and Competent Operators</li> <li>• No unauthorised personnel allowed at the controls of the machine</li> <li>• Fieldwicks SWP106 to be read and understood by all operators</li> <li>• Operator Manual Located in Cab of Machine at all times</li> <li>• Daily plant inspections before the beginning of a shift are used to identify any potential machine issues that may exist</li> <li>• Isolation Procedures are undertaken before any maintenance activity</li> </ul>	5

<b>Plant Specific Control Measures</b>	<b>Control Measure Description</b>

Note : Refer to the Risk Matrix set out in OH&SP No. 004 for calculation of risk level